BLE Transmitter E1
User Guide

APP Control Mode

1. Install APP —— RF FUN.

Download on the App Store

GET IN ON Google Play

APK Download for Andriod


2. Controller assemble antenna, connect power.

3. Turn on the Bluetooth of the phone, connect APP to DMX transmitter as follow steps.

*Click Scan;
*Click Fliter;
*Find the device named "G6S" and connect.

Note: Please keep the distance of phone and BLE transmitter within 26 feet to make sure the APP work properly.



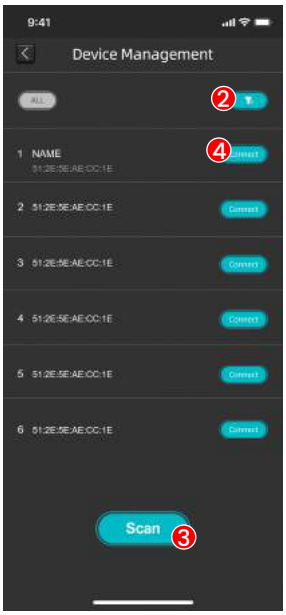

4.



Zone Control
*Choose control 1 zone, multi zones or all zones.


Color Control
*Sparkles level 1,2,3: lights flash at different speeds.
*Sparkles level 4: lights steady ON.

*Sparkles level 1,2,3,4: lights fade at different speeds.

*RGB Fade: Lights fade R-G-B by turn.
*RGB Blink: Lights flash R-G-B by turn.
*Blink Moving: rainbow color moving between 10 zones.
*Fade Moving: rainbow color fade between 10 zones.

*Sparkles 1,2,3,4: adjust the speed of light effects.

5. BLE firmware Update.

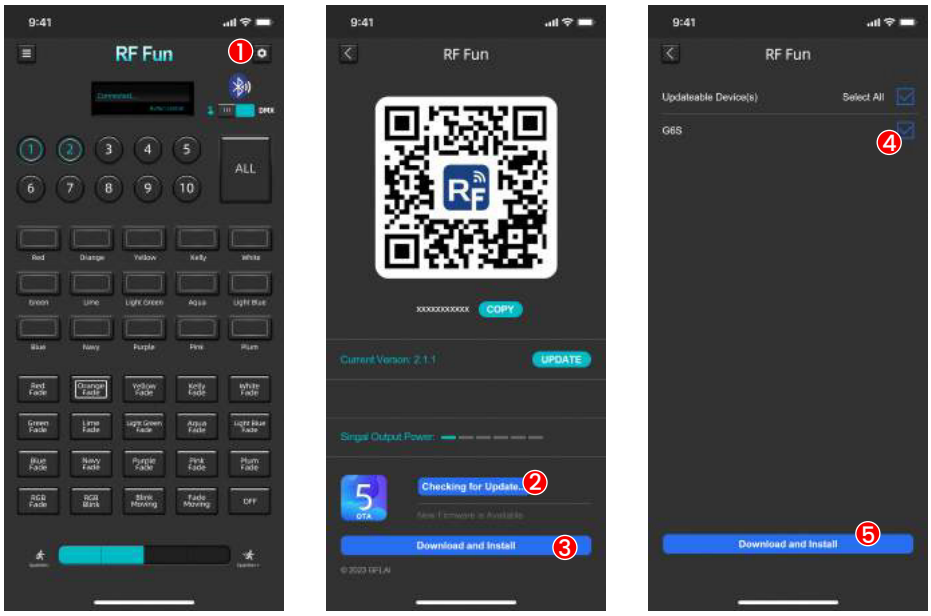


DMX Control Mode


1. Switch the button to DMX mode.



2. Buttons function:

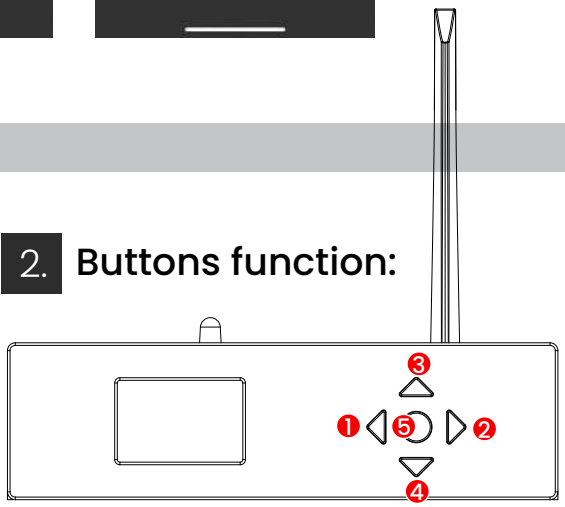

❶ Signal level decrease
❷ Signal level increase
❸ CH start address increase
❹ CH start address decrease
❺ Audio / DMX mode switch
Double press to set the transmitter into DMX mode, "DMX LOCKED" will displayed on the transmitter screen.

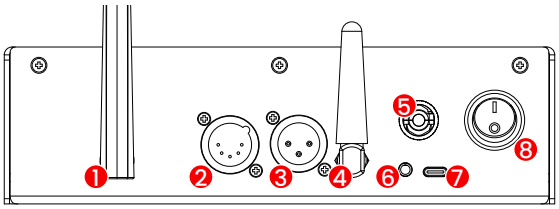

❶ RF ANTENNA
❷ DMX 5PIN IN
❸ DMX 3PIN IN
❹ BLE ANTENNA
❺ DC 6V/1A
❻ AUDIO IN
❼ PROGRAM
❽ ON/OFF POWER

Be sure not to misplace the antennas ❶❹, otherwise the transmitter will burn out.

3. DMX datasheet

Scan to Get Channel Datasheet

https://bit.ly/gf-41ch-channel-data-sheet